

Warranty

**24**  
Months

Included



**Technical Highlights:**

- Shore Hardness A, C, D
- Accuracy: 1 % of the measured value
- Peak Hold function

Size: L 115 x B 60 x H 25 mm; Weight: 160 g




**Typical applications,** to measure the penetration of

**Shore A:** rubber, elastomers, neoprene, silicone, vinyl, soft plastics, felt, leather and similar material.

**Shore C/0:** foam, sponge, etc.

**Shore D:** plastics, formica, epoxies, plexiglass, etc.

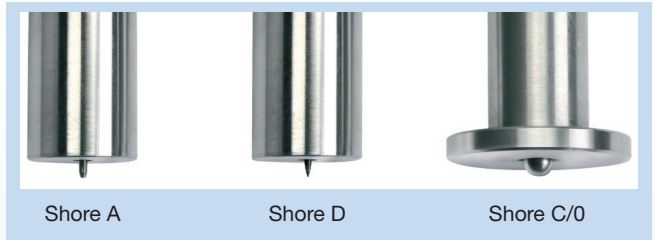

Delivered in a **wooden carrying case**



**Measurement mode:**

- **Max** mode: Holds the maximum value in the display
- **Point** mode: Shows one instant value

**Can be attached to the test stands:**

- TH-AC for Shore A and C
- TH-D for Shore D

**Standards met by HB serie:**

- DIN 53505
- ASTM D2240
- ISO 868

Model	Hardness Type	Max	Resolution
<b>HBA 100-0</b>	Shore A	100 HA	1.0 HA
<b>HBC 100-0</b>	Shore C/0	100 HC	1.0 HC
<b>HBD 100-0</b>	Shore D	100 HD	1.0 HD